


NT-PIPE-SO

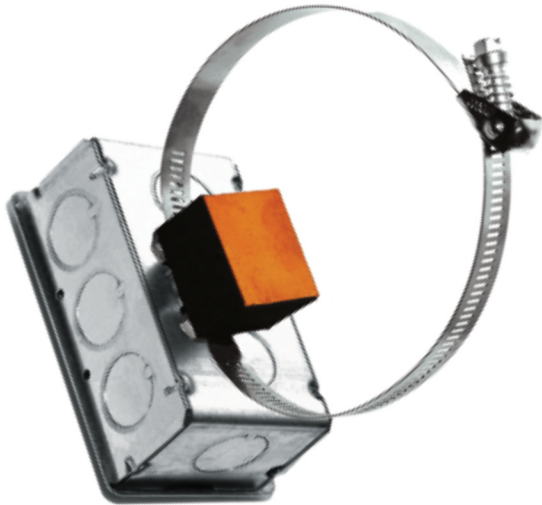

- Pipe Temperature Sensing Probe
- For Pipes 1.25" to 4" In Diameter
- Temperature Range
-40°F to +200°F
(-40°C to +93°C)
- Works with NetX X-Series Thermostats
- Requires NT-URS

GENERAL DESCRIPTION:

The NT-PIPE-SO temperature sensor is designed to work in conjunction with the NetX™ X7 and X5 thermostat families. The NT-PIPE-SO is a strap on pipe sensor for pipes 1.25" to 4", with a full galvanized single gang box. The NT-PIPE-SO is to be connected to the NT-URS sensor electronics. The NT-URS is required (sold separately).


SPECIFICATIONS:

Thermostat Sensing Range:
Control Accuracy:
Remote Sensor Terminations:

-40°F to 200°F (-40°C to 93°C)
 ±1°F @ 68°F (0.5°C @ 20°C)
 Two Wire connected to NT-URS



WIRING DIAGRAMS:

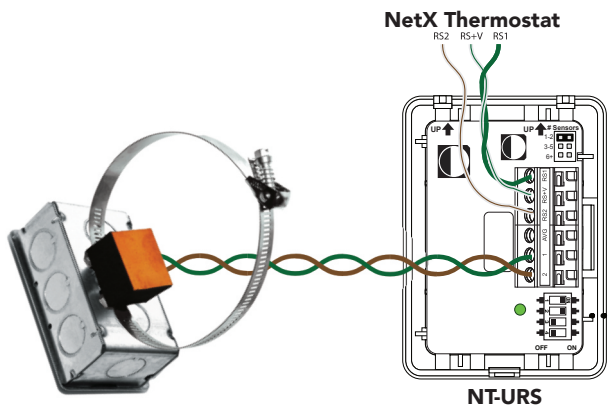

NT-URS SENSOR TYPE CONFIGURATION

<p>INDOOR Uses Internal temperature sensor or Indoor probe like the NT-FS or NT-FS-S</p>	<p>AUX 1 Uses internal temperature sensor or external probe. The external probe connects to 2-screwless terminals</p>
<p>OUTDOOR Uses outdoor probe. Has specific curve. Probe connects to 2-screwless terminals Ignores Temp/Hum Sensor</p>	<p>AUX 2 Uses internal temperature sensor or external probe. The external probe connects to 2-screwless terminals</p>
<p>INDOOR HUMIDITY ONLY Uses Internal Humidity sensor.</p>	<p>AUX 3 Uses internal temperature sensor or external probe. The external probe connects to 2-screwless terminals</p>